



INSTALLATION GUIDE

# Urban Shock Solutions



## AUSTRALIA

---

☎ 07 3382 7260

✉ [info@urbanturfsolutions.com.au](mailto:info@urbanturfsolutions.com.au)

🌐 [urbanturfsolutions.com.au](http://urbanturfsolutions.com.au)

## NEW ZEALAND

---

☎ 0508 872 268

✉ [info@urbanturfsolutions.co.nz](mailto:info@urbanturfsolutions.co.nz)

🌐 [urbanturfsolutions.co.nz](http://urbanturfsolutions.co.nz)

# Installation Details

## 35mm

### 1 Preparation

The sub-base should be level and free from dirt, rubble and anything else on its surface.




### 2 Taping/joining the 1x1m Urban Shock35 in a stretcher bond pattern.



### 3 Lay Urban Shock35 in a stretcher bond pattern as shown below.


For Urban Shock70 lay in a stretcher bond pattern with the top layer off-set from the bottom.

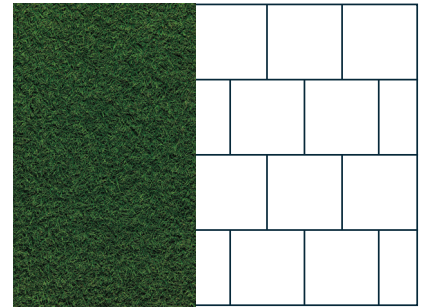

## 10mm

### 1 Progressively lay the 10mm Urban Shock as shown below

Lay 3 roll widths, then lay UTS grass on top.

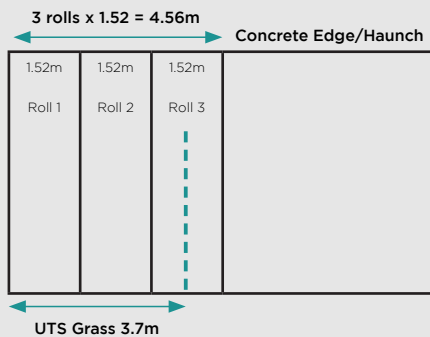


**NB:** use a string line to ensure the Urban Shock 10mm rolls are straight. Glue Urban Shock 10mm to a concrete edge/haunch min 100mm x 100mm.

**Note:** do not trim Urban Shock 10mm to size until you are ready to glue to concrete edge.

Place a heavy timber plank or bags of sand on the Urban Shock 10mm to hold in place until the glue sets.

### 2 Lay another 2 roll widths of 10mm Urban Shock then lay UTS grass on top

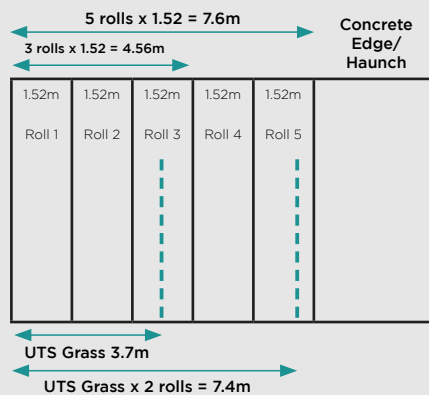

Repeat Step 1 for rolls 4 and 5. Continue to repeat until entire area is covered.



### 4 Heat Welding Urban Shock Tape

Apply tape evenly to the centre of the join ensuring there is no gap. Press the tape down with your palm as you apply. Then go over the tape with a heat gun (start at a distance of 10cm and adjust accordingly), this melts the adhesive and welds the tape to the Urban Shock. Go over the heated tape immediately with a roller to spread the adhesive to create a strong bond.



Contact our  
shock pad  
specialist



07 3382 7260



info@urbanturfsolutions.com.au



urbanturfsolutions.com.au

